



# Wondermole

## Wondermole User Manual of Miner Image Burning and Installation

### 1. Download Wondermole Miner Image

To download Wondermole Miner Image, please go to [wondermole.io](http://wondermole.io)


### 2. Burn and initiate images

2.1 As usual, BalenaEtcher [ A Burning Tool ] is recommended; Google it and complete the download.



2.2 Prepare SSD needs to be burnt

2.3 Open BalenaEtcher and select the image downloaded, then select the SSD needs to be burnt and click Flash!

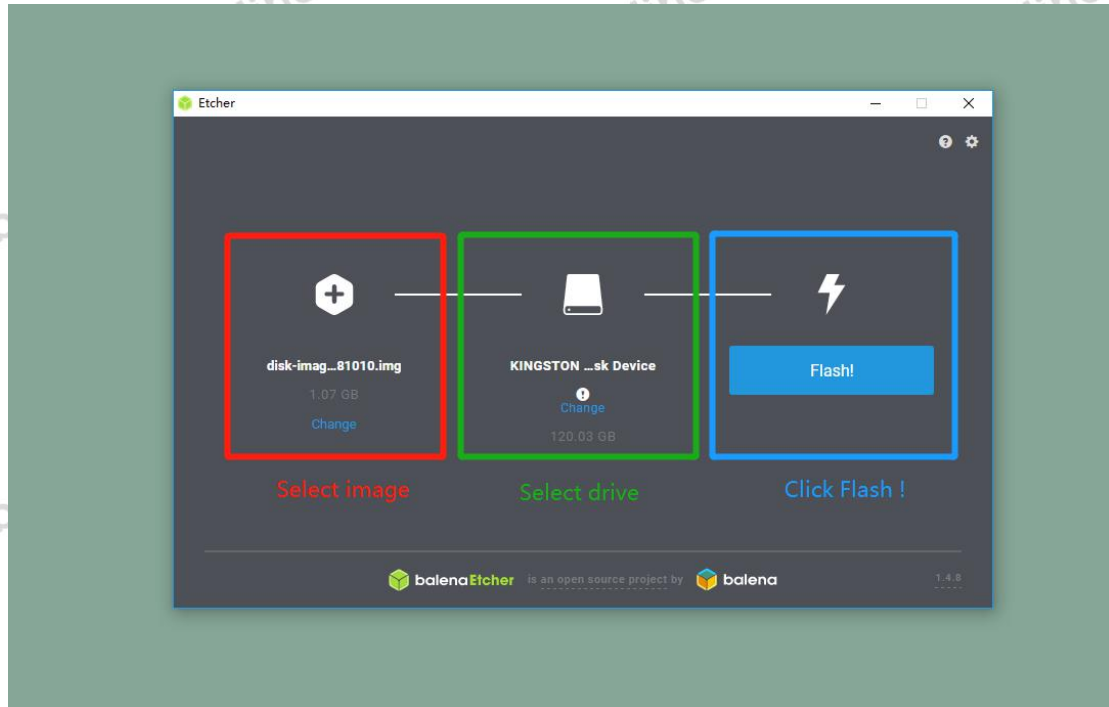

2.4 When the burning is complete, use SSD to plug into your rigs. Motherboard of some rigs need to set UEFI boot in BIOS.(Note: Suggest users who use SSDs plans, set UEFI boot in BIOS)

2.5 When you complete above procedures, don't rush to start your rigs. Please confirm Wondermole software is at least version 2.2.0 and system image version at least 3.2.5. The SSDs plan needs to satisfy these two conditions, otherwise it can not support the normal operation of your rigs.

When the confirmation is done, start your rigs and Wondermole will automatically scan your rigs and display.

**Wondermole Team** last edited on April 25,2019.